



# Canon EOS 30 Side Panel With Remote Control Socket Replacement

How to remove the side panel with Remote Control Socket.

Written By: Sterling Vinson



## INTRODUCTION

Removing the side panel with Remote Control Socket is safe and simple. It only requires a screwdriver.

---



### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
-

## Step 1 — Front Panel



- Remove two 4.8 mm black screws on the front of the camera.

## Step 2



- Remove one 4.3 mm black screw under the lens ring and one 4.8 mm black screw on the bottom of the camera.



### Step 3



- Remove one 4.8 mm black screw on the left side.

### Step 4



- Remove the front panel by lifting out the side opposite the grip.

## Step 5 — Bottom Panel



- Remove seven 4.25 mm black screws on the bottom panel.

## Step 6



- Remove the bottom panel.

## Step 7 — Side Panel With Remote Control Socket



- Remove two 6.5 mm black screws from the panel.


## Step 8



- Remove plastic Remote Control Socket cap by pulling it straight out.



## Step 9

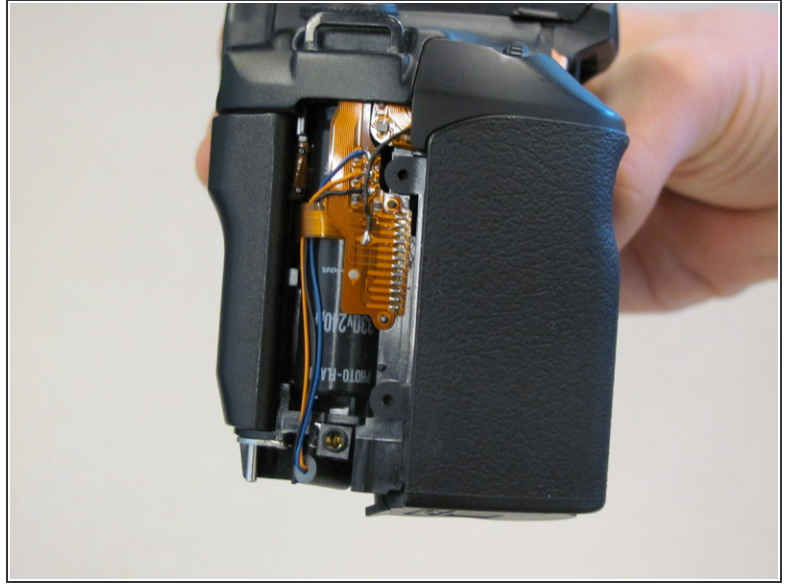

- Slide panel toward bottom of camera to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-07 04:04:05 AM.